

## **A7s Plus**

## **Receiving Card**

# Specifications

Document Version	Release Date	Description
V1.2.0	2022-11-01	Updated the appearance diagram.
V1.1.6	2022-08-31	Updated the input voltage.
V1.1.5	2022-03-26	<ul><li>Added the dimensions diagram description.</li><li>Updated the pins section.</li></ul>
V1.1.4	2021-11-26	<ul> <li>Deleted the descriptions related to dual backup of calibration coefficients.</li> <li>Updated the certification related description.</li> </ul>
V1.1.3	2021-08-18	Updated the side-view dimensions diagram.
V1.1.2	2021-07-30	<ul><li>Updated the description of features.</li><li>Added the certification related description.</li></ul>
V1.1.1	2021-02-06	Updated the packing information.
V1.1.0	2020-12-07	<ul> <li>Updated the appearance diagram.</li> <li>Added the feature of dual backup of calibration coefficients.</li> </ul>

## **Change History**

## Introduction

The A7s Plus is a general small receiving card developed by Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). A single A7s Plus supports resolutions up to 512×512@60Hz (NovaLCT V5.3.1 or later required). Supporting color management, 18bit+, pixel level brightness and chroma calibration, individual gamma adjustment for RGB, and 3D functions, the A7s Plus can significantly improve the display effect and user experience.

The A7s Plus uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A7s Plus has improved electromagnetic compatibility and is suitable for various on-site setups.

## Certifications

#### RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

## **Features**

#### **Improvements to Display Effect**

- Color management Allow users to freely switch the color gamut of the screen between different gamuts in real time to enable more precise colors on the screen.
- 18bit+ Improve the LED display grayscale by 4 times to avoid grayscale loss due to low brightness and allow for a smoother image.
- Pixel level brightness and chroma calibration Work with NovaStar's high-precision calibration system to calibrate the brightness and chroma of each pixel, effectively removing brightness differences and chroma differences, and enabling high brightness consistency and chroma consistency.
- Quick adjustment of dark or bright lines The dark or bright lines caused by splicing of cabinets or modules can be adjusted to improve the visual experience. This function is easy to use and the adjustment takes effect immediately.

#### Improvements to Maintainability

- Smart module (dedicated firmware required) Working with the smart module, the receiving card supports module ID management, storage of calibration coefficients and module parameters, monitoring of module temperature, voltage and flat cable communication status, LED error detection, and recording of the module run time.
- Automatic module calibration After a new module with flash memory is installed to replace the old one, the calibration coefficients stored in the flash memory can be automatically uploaded to the receiving card when it is powered on.
- Quick uploading of calibration coefficients The calibration coefficients can be quickly uploaded to the receiving card, improving efficiency greatly.
- Module Flash management For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients in module Flash
   For modules with flash memory, when the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to

In NovaLCT V5.2.0 or later, the adjustment can be performed without using or changing the video source.

- 3D function Working with the sending card that supports 3D function, the receiving card supports 3D image output.
- Individual gamma adjustment for RGB Working with NovaLCT (V5.2.0 or later) and the sending card that supports this function, the receiving card supports individual adjustment of red gamma, green gamma and blue gamma, which can effectively control image nonuniformity at low grayscale conditions and white balance offset, allowing for a more realistic image.
- Image rotation in 90° increments The display image can be set to rotate in multiples of 90° (0°/90°/180°/270°).

upload the calibration coefficients in the flash memory of the module to the receiving card.

- Mapping function The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.
- Setting of a pre-stored image in receiving card The image displayed during startup, or displayed when the Ethernet cable is disconnected or there is no video signal can be customized.
- Temperature and voltage monitoring The temperature and voltage of the receiving card can be monitored without using peripherals.
- Cabinet LCD The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
  - Bit error detection The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.

NovaLCT V5.2.0 or later is required.



- Status detection of dual power supplies When two power supplies are used, their working status can be detected by the receiving card.
- Firmware program readback The firmware program of the receiving card can be read back and saved to the local computer. NovaLCT V5.2.0 or later is required.

#### Improvements to Reliability

 Dual card backup and status monitoring In an application with requirements for high reliability, two receiving cards can be mounted onto a single hub board for backup. When the primary receiving card fails, the backup card can serve immediately to ensure uninterrupted operation of the display.

The working status of the primary and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

Loop backup

The receiving cards and the sending card form a loop via the primary and backup line connections. When a fault occurs at a location of the lines, the screen can still display the image normally.

- Configuration parameter readback The configuration parameters of the receiving card can be read back and saved to the local computer.
- LVDS transmission (dedicated firmware required) Low-voltage differential signaling (LVDS) transmission is used to reduce the number of data cables from the hub board to module, increase the transmission distance, and improve the signal transmission quality and electromagnetic compatibility (EMC).
- Dual backup of configuration parameters
   The receiving card configuration parameters are
   stored in the application area and factory area of
   the receiving card at the same time. Users
   usually use the configuration parameters in the
   application area. If necessary, users can restore
   the configuration parameters in the factory area
   to the application area.
- Dual program backup Two copies of firmware program are stored in the application area of the receiving card at the factory to avoid the problem that the receiving card may get stuck abnormally during program update.

## Appearance



### Bottom



All product pictures shown in this document are for illustration purpose only. Actual product may vary.




## Indicators

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.
		Flashing once every 3s	Ethernet cable connection is abnormal.
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.
		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.
Power indicator	Red	Always on	The power input is normal.

## **Dimensions**

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.5 mm. Ground connection (GND) is enabled for mounting holes.

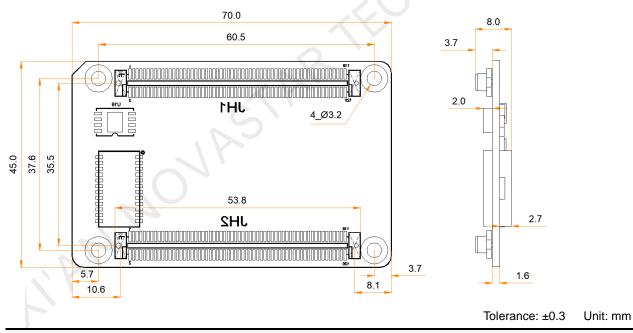

## Note

The distance between outer surfaces of the A7s Plus and hub boards after their high-density connectors fit together is 5.0 mm. A 5-mm copper pillar is recommended.

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

## Pins

### **<u>32 Groups of Parallel RGB Data</u>**



	JH1						
	GND	1	2	GND			
LCD CS signal	EXT_CS#RW	3	4	NC			
LCD RS signal	EXT_LCD_CD/RS	5	6	NC			
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC			
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC			
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC			
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC			
LCD control button	EXT_KEY	15	16	NC			
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC			
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC			
	GND	21	22	NC			
	NC	23	24	NC			
	GND	25	26	GND			
/	G17	27	28	R17	/		
/	R18	29	30	B17	/		
/	B18	31	32	G18	/		
/	G19	33	34	R19	/		
/	R20	35	36	B19	/		
/	B20	37	38	G20	/		
	GND	39	40	GND			
/	G21	41	42	R21	/		
/	R22	43	44	B21	/		




		JH1			
/	B22	45	46	G22	/
/	G23	47	48	R23	/
/	R24	49	50	B23	/
/	B24	51	52	G24	/
	GND	53	54	GND	
/	G25	55	56	R25	/
/	R26	57	58	B25	/
/	B26	59	60	G26	/
/	G27	61	62	R27	/
/	R28	63	64	B27	/
/	B28	65	66	G28	/
	GND	67	68	GND	
/	G29	69	70	R29	/
/	R30	71	72	B29	
/	B30	73	74	G30	/
/	G31	75	76	R31	
/	R32	77	78	B31	1
/	B32	79	80	G32	/
	GND	81	82	GND	
/	RFU4	83	84	RFU3	/
/	RFU6	85	86	RFU5	/
/	RFU8	87	88	RFU7	/
/	RFU10	89	90	RFU9	/
/	RFU12	91	92	RFU11	/
/	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
	NC	99	100	RFU17	/
	NC	101	102	NC	
	NC	103	104	NC	
	NC	105	106	NC	
	NC	107	108	NC	
	GND	109	110	GND	
	GND	111	112	GND	
	NC	113	114	NC	
	EXT_5V	115	116	EXT_5V	
	EXT_5V	117	118	EXT_5V	
	EXT_5V	119	120	EXT_5V	

	JH2					
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground	
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground	
	NC	5	6	NC		
	NC	7	8	NC		
	Port1_T0+	9	10	Port2_T0+		
	Port1_T0-	11	12	Port2_T0-		
	NC	13	14	NC		
	Port1_T1+	15	16	Port2_T1+		
Gigabit Ethernet port	Port1_T1-	17	18	Port2_T1-	Gigabit Ethernet port	
	NC	19	20	NC		
	Port1_T2+	21	22	Port2_T2+		
	Port1_T2-	23	24	Port2_T2-		
	NC	25	26	NC		

JH2					
	Port1_T3+	27	28	Port2_T3+	
	Port1_T3-	29	30	Port2_T3-	
	NC	31	32	NC	
	NC	33	34	NC	
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)
	GND	37	38	GND	
Line decoding signal	A	39	40	DCLK1	Shift clock output 1
Line decoding signal	В	41	42	DCLK2	Shift clock output 2
Line decoding signal	С	43	44	LAT	Latch signal output
Line decoding signal	D	45	46	CTRL	Afterglow control signal
Line decoding signal	E	47	48	OE_RED	Display enable signal
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal
	GND	51	52	GND	
/	G1	53	54	R1	1
/	R2	55	56	B1	
/	B2	57	58	G2	1
/	G3	59	60	R3	/
/	R4	61	62	B3	/
/	B4	63	64	G4	1
	GND	65	66	GND	
/	G5	67	68	R5	/
/	R6	69	70	B5	/
/	B6	71	72	G6	/
/	G7	73	74	R7	/
/		75	76	B7	/
/	B8	77	78	G8	/
1	GND	79	80	GND	1
/	G9	81	82	R9	/
1	R10	83	84	B9	/
/	B10	85	86	G10	/
/	G11	87	88	R11	/
/	R12	89	90	B11	/
/			90	G12	/
	B12 GND	91 93	92	GND	/
					/
1	G13	95	96	R13	
1	R14	97	98	B13	/
	B14	99	100	G14	/
1	G15	101	102	R15	/
1	R16	103	104	B15	/
1	B16	105	106	G16	/
P <sup>2</sup>	GND	107	108	GND	
	NC	109	110	NC	
	NC	111	112	NC	
	NC	113	114	NC	
	NC	115	116	NC	
	GND	117	118	GND	
	GND	119	120	GND	

#### 64 Groups of Serial Data

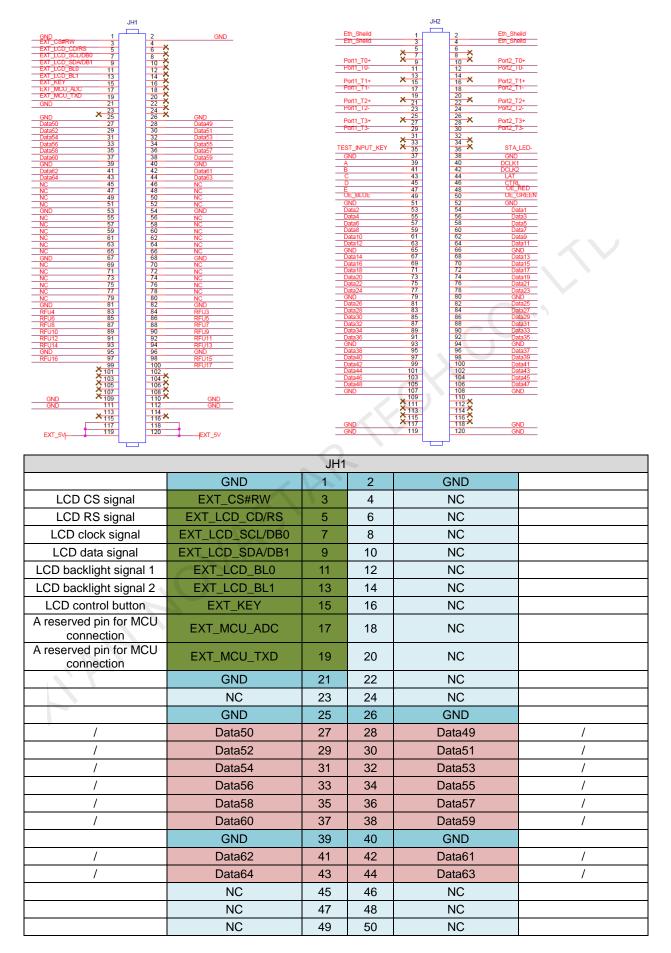



JH1					
	NC	51	52	NC	
	GND	53	54	GND	
	NC	55	56	NC	
	NC	57	58	NC	
	NC	59	60	NC	
	NC	61	62	NC	
	NC	63	64	NC	
	NC	65	66	NC	
	GND	67	68	GND	
	NC	69	70	NC	
	NC	71	72	NC	
	NC	73	74	NC	
	NC	75	76	NC	
	NC	77	78	NC	
	NC	79	80	NC	
	GND	81	82	GND	
/	RFU4	83	84	RFU3	/
/	RFU6	85	86	RFU5	1
/	RFU8	87	88	RFU7	/
/	RFU10	89	90	RFU9	/
/	RFU12	91	92	RFU11	/
/	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
	NC	99	100	RFU17	/
	NC	101	102	NC	
	NC	103	104	NC	
	NC	105	106	NC	
	NC	107	108	NC	
	GND	109	110	GND	
	GND	111	112	GND	
	NC	113	114	NC	
	EXT_5V	115	116	EXT_5V	
	EXT_5V	117	118	EXT_5V	
	EXT_5V	119	120	EXT_5V	

11.10

			JH2		
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground
	NC	5	6	NC	
	NC	7	8	NC	
	Port1_T0+	9	10	Port2_T0+	
	Port1_T0-	11	12	Port2_T0-	
	NC	13	14	NC	
	Port1_T1+	15	16	Port2_T1+	
	Port1_T1-	17	18	Port2_T1-	
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port
	Port1_T2+	21	22	Port2_T2+	
	Port1_T2-	23	24	Port2_T2-	
	NC	25	26	NC	
	Port1_T3+	27	28	Port2_T3+	
	Port1_T3-	29	30	Port2_T3-	
	NC	31	32	NC	
	NC	33	34	NC	
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)
	GND	37	38	GND	



			JH2		
Line decoding signal	А	39	40	DCLK1	Shift clock output 1
Line decoding signal	В	41	42	DCLK2	Shift clock output 2
Line decoding signal	С	43	44	LAT	Latch signal output
Line decoding signal	D	45	46	CTRL	Afterglow control signal
Line decoding signal	E	47	48	OE_RED	Display enable signal
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal
	GND	51	52	GND	
/	Data2	53	54	Data1	/
/	Data4	55	56	Data3	/
/	Data6	57	58	Data5	/
/	Data8	59	60	Data7	/
/	Data10	61	62	Data9	/
/	Data12	63	64	Data11	/
	GND	65	66	GND	
/	Data14	67	68	Data13	/
/	Data16	69	70	Data15	/
/	Data18	71	72	Data17	/
/	Data20	73	74	Data19	1
/	Data22	75	76	Data21	/
/	Data24	77	78	Data23	/
	GND	79	80	GND	
/	Data26	81	82	Data25	
/	Data28	83	84	Data27	/
/	Data30	85	86	Data29	/
/	Data32	87	88	Data31	/
/	Data34	89	90	Data33	/
/	Data36	91	92	Data35	/
	GND	93	94	GND	
/	Data38	95	96	Data37	/
/	Data40	97	98	Data39	/
/	Data42	99	100	Data41	/
/	Data44	101 🧹	102	Data43	/
/	Data46	103	104	Data45	/
/	Data48	105	106	Data47	/
	GND	107	108	GND	
	NC	109	110	NC	
	NC	111	112	NC	
	NC	113	114	NC	
	NC	115	116	NC	
	GND	117	118	GND	
	GND	119	120	GND	
					-

## Note

The recommended power input is 5.0 V.

OE\_RED, OE\_GREEN and OE\_BLUE are display enable signals. When RGB are not controlled separately, use OE\_RED. When the PWM chip is used, they are used as GCLK signals.

In the mode of 128 groups of serial data, Data65–Data128 are multiplexed into Data1–Data64.

### **Reference Design for Extended Functions**

	Pins for Extended Functions						
Pin	Recommended Module Flash Pin	Recommended Smart Module Pin	Description				
RFU4	HUB_SPI_CLK	Reserved	Clock signal of serial pin				
RFU6	HUB_SPI_CS	Reserved	CS signal of serial pin				
RFU8	HUB_SPI_MOSI	/	Module Flash data storage input				
KFUO	/	HUB_UART_TX	Smart module TX signal				
RFU10	HUB_SPI_MISO	/	Module Flash data storage output				
KFU10	/	HUB_UART_RX	Smart module RX signal				
RFU3	HUB_	CODE0	Madula Elash PLIS control pin				
RFU5	HUB_	CODE1	Module Flash BUS control pin				



RFU7HUB_CODE2RFU9HUB_CODE3RFU11HUB_H164_CSDRFU13HUB_H164_CLKRFU14POWER_STA1RFU16POWER_STA2RFU15MS_DATARFU17MS_IDDual card backup identifier signal		Pins for Extended Functions				
RFU11HUB_H164_CSD74HC164 data signalRFU13HUB_H164_CLK74HC164 data signalRFU14POWER_STA1Dual power supply detection signalRFU16POWER_STA2Dual card backup connection signalRFU15MS_DATADual card backup connection signal	RFU7	HUB_CODE2				
RFU13HUB_H164_CLK74HC164 data signalRFU14POWER_STA1Dual power supply detection signalRFU16POWER_STA2Dual card backup connection signalRFU15MS_DATADual card backup connection signal	RFU9	HUB_CODE3				
RFU13     HUB_H164_CLK       RFU14     POWER_STA1       RFU16     POWER_STA2       RFU15     MS_DATA   Dual card backup connection signal	RFU11	HUB_H164_CSD	74HC164 data aignal			
RFU16     POWER_STA2     Dual power supply detection signal       RFU15     MS_DATA     Dual card backup connection signal	RFU13	HUB_H164_CLK	74HC104 data signal			
RFU16         POWER_STA2         Dual card backup connection signal           RFU15         MS_DATA         Dual card backup connection signal	RFU14	POWER_STA1	Dual newer auguly detection signal			
	RFU16	POWER_STA2	Dual power supply detection signal			
RFU17 MS_ID Dual card backup identifier signal	RFU15	MS_DATA	Dual card backup connection signal			
	RFU17	MS_ID	Dual card backup identifier signal			

### Note

The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

## **Specifications**

Maximum Resolution	512×512@60Hz	
Electrical Parameters	Input voltage	DC 3.8 V to 5.5 V
	Rated current	0.6 A
	Rated power consumption	3.0 W
Operating Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 90% RH, non-condensing
Storage Environment	Temperature	-25°C to +125°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 8.0 mm
	Net weight	17.4 g Note: It is the weight of a single receiving card only.
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 80 receiving cards.
191	Packing box dimensions	378.0 mm × 190.0 mm × 120.0 mm

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

#### Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### Trademark

NOVASTAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech

Technical support support@novastar.tech