

AT32
Receiving Card



Specifications

Change History

Document Version	Release Date	Description
V1.3.0	2022-11-01	Updated the appearance diagram.
V1.2.1	2022-08-31	Updated the input voltage.
V1.2.0	2022-04-24	Updated the top-view diagram.
V1.1.2	2022-03-26	 Added the certifications description. Added the dimensions diagram description. Updated some feature descriptions. Updated the pins section.
V1.1.1	2021-02-06	Updated the packing information.
V1.1.0	2020-09-11	 Optimized the feature description. Optimized the dimensions diagram. Updated the maximum loading capacity.
V1.0.1	2020-04-09	Updated the firmware version.Updated the indicator description.
V1.0.0	2020-01-02	First release

Introduction

The AT32 is a general small receiving card developed by Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). A single AT32 supports resolutions up to 512×384 @60Hz (NovaLCT V5.3.0 or later required). Supporting various functions such as pixel level brightness and chroma calibration, quick adjustment of dark or bright lines, 3D, individual gamma adjustment for RGB, and image rotation in 90° increments, the AT32 can significantly improve the display effect and user experience.

The AT32 uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the AT32 has improved electromagnetic compatibility and is suitable for various on-site setups.

Certifications

RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

Features

Improvements to Display Effect

- Pixel level brightness and chroma calibration
 Work with NovaStar's high-precision calibration
 system to calibrate the brightness and chroma of
 each pixel, effectively removing brightness
 differences and chroma differences, and
- enabling high brightness consistency and chroma consistency.
- Quick adjustment of dark or bright lines
 The dark or bright lines caused by splicing of modules and cabinets can be adjusted to

improve the visual experience. The adjustment is easy and takes effect immediately.

In NovaLCT V5.2.0 or later, the adjustment can be made without using or changing video source.

- 3D function
 Working with the sending card that supports 3D function, the receiving card supports 3D image output.
- Individual gamma adjustment for RGB Working with NovaLCT (V5.2.0 or later) and the sending card that supports this function, the

Improvements to Maintainability

- Smart module (dedicated firmware required)
 Working with the smart module, the receiving
 card supports module ID management, storage
 of calibration coefficients and module
 parameters, monitoring of module temperature,
 voltage and flat cable communication status,
 LED error detection, and recording of the
 module run time.
- Automatic module calibration
 After a new module with flash memory is installed to replace the old one, the calibration coefficients stored in the flash memory can be automatically uploaded to the receiving card when it is powered on.
- Quick uploading of calibration coefficients
 The calibration coefficients can be quickly uploaded to the receiving card, improving efficiency greatly.
- Module Flash management
 For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients stored in module Flash
 For modules with flash memory, if the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to upload the calibration coefficients in the flash memory of the module to the receiving card.
- Mapping function
 The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.

Improvements to Reliability

 Dual card backup and status monitoring In an application with requirements for high reliability, two receiving cards can be mounted onto a single hub board for backup. If the main receiving card supports individual adjustment of red gamma, green gamma and blue gamma, which can effectively control image nonuniformity under low grayscale and white balance offset, allowing for a more realistic image

- Image rotation in 90° increments
 The display image can be set to rotate in multiples of 90° (0°/90°/180°/270°).
- Setting of a pre-stored image in receiving card
 The image displayed on the screen during
 startup, or displayed when the Ethernet cable is
 disconnected or there is no video signal can be
 customized.
- Temperature and voltage monitoring
 The temperature and voltage of the receiving card can be monitored without using peripherals.
- Cabinet LCD
 The LCD module of the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error detection
 The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.
- Status detection of dual power supplies
 When two power supplies are connected, their working status can be detected by the receiving

NovaLCT V5.2.0 or later is required.

- Firmware program readback
 The receiving card firmware program can be read back and saved to the local computer.
 - NovaLCT V5.2.0 or later is required.
- Configuration parameter readback
 The receiving card configuration parameters can be read back and saved to the local computer.
- LVDS transmission (dedicated firmware required)
 Low-voltage differential signaling (LVDS)
 transmission is used to reduce the number of
 data cables from the hub board to module,
 increase the transmission distance, and improve
 the signal transmission quality and
 electromagnetic compatibility (EMC).

receiving card fails, the backup card can serve immediately to ensure uninterrupted operation of the display.



The working status of the main and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

Loop backup

The receiving card and sending card form a loop via the main and backup line connections. If a fault occurs at a location of the lines, the screen can still display the image normally.

Dual program backup

Two copies of firmware program are stored in the application area of the receiving card at the factory to avoid the problem that the receiving card may get stuck abnormally during program update.

Appearance

Top



Power Running Indicator Indicator

Bottom



High-Density Connectors


All product pictures shown in this document are for illustration purpose only. Actual product may vary.

Indicators

Indicator	Color	Status	Description				
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.				
		Flashing once every 3s	Ethernet cable connection is abnormal.				
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.				
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.				
		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.				
Power indicator	Red	Always on	The power supply is normal.				

Dimensions

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 9.5 mm. Ground connection (GND) is enabled for mounting holes.

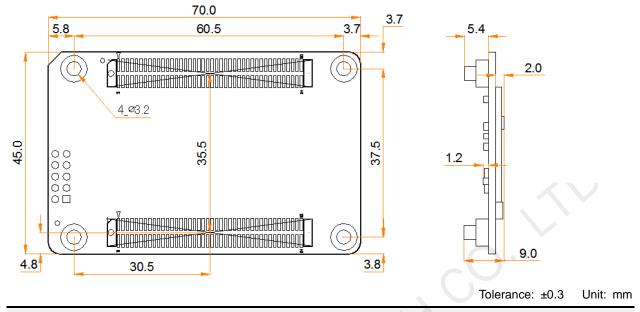



The distance between outer surfaces of the AT32 and HUB boards after their high-density connectors fit together is 8.0 mm. An 8-mm copper pillar is recommended.

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

Pins

32 Groups of Parallel RGB Data



Port1_T0-

Ethernet

5

6

Port2_T0-

Ground

Gigabit

Ethernet

R16

6

B15

5

JH1						JH2					
/	B16	7	8	G16	/	port	Port1_T1+	7	8	Port2_T1+	port
/	G17	9	10	R17	/	·	Port1_T1-	9	10	Port2_T1-	•
/	R18	11	12	B17	/		Port1_T2+	11	12	Port2_T2+	
/	B18	13	14	G18	/		Port1_T2-	13	14	Port2_T2-	
/	G19	15	16	R19	/		Port1_T3+	15	16	Port2_T3+	
/	R20	17	18	B19	/		Port1_T3-	17	18	Port2_T3-	
/	B20	19	20	G20	/	Ground	GND	19	20	GND	Ground
Ground	GND	21	22	GND	Ground	Test	TEST_IN	21	22	STA_LED-	Running
Oround					Orodria	button	PUT_KEY				indicator
/	G21	23	24	R21	/	Ground	GND	23	24	GND	Ground
/	R22	25	26	B21	/		Α	25	26	DCLK1	Shift
											clock
/	B22	27	28	G22	/		В	27	28	DCLK2	Shift
						Line					clock Latch
/	G23	29	30	R23	/	decoding	С	29	30	LAT	signal
						signal					Afterglow
/	R24	31	32	B23	/	Signal	D	31	32	CTRL	control
,	1124	01	02	D20	,			01	02	OTTE	signal
											Display
/	B24	33	34	G24	/		Е	33	34	OE	enable
/	G25	35	36	R25	/	Ground	GND	35	36	GND	Ground
/	R26	37	38	B25	/	/	G1	37	38	R1	/
/	B26	39	40	G26	/	/	R2	39	40	B1	/
Ground	GND	41	42	GND	Ground	/	B2	41	42	G2	/
/	G27	43	44	R27	/	/	G3	43	44	R3	/
/	R28	45	46	B27	/	/	R4	45	46	B3	/
/	B28	47	48	G28	/	/	B4	47	48	G4	/
/	G29	49	50	R29	/	Ground	GND	49	50	GND	Ground
/	R30	51	52	B29	/	1	G5	51	52	R5	/
/	B30	53	54	G30	/	1	R6	53	54	B5	/
/	G31	55	56	R31	/	/	B6	55	56	G6	/
/	R32	57	58	B31	1		G7	57	58	R7	/
/	B32	59	60	G32	1	/	R8	59	60	B7	/
Ground	GND	61	62	GND	Ground	/	B8	61	62	G8	/
	RFU4	63	64	RFU3		Ground	GND	63	64	GND	Ground
	RFU6	65	66	RFU5		/	G9	65	66	R9	/
	RFU8	67	68	RFU7		/	R10	67	68	B9	/
Reserved	RFU10	69	70	RFU9	Reserved	/	B10	69	70	G10	/
116361760	RFU12	71	72	RFU11	1 COSCIVEU	/	G11	71	72	R11	/
	RFU14	73	74	RFU13		/	R12	73	74	B11	/
	RFU16	75	76	RFU15		/	B12	75	76	G12	/
	RFU18	77	78	RFU17		Ground	GND	77	78	GND	Ground
/	NC	79	80	NC	/	/	G13	79	80	R13	/
5V	EXT_5V	81	82	EXT_5V	5V	/	R14	81	82	B13	/
	EXT_5V	83	84	EXT_5V	0 0	/	B14	83	84	G14	/

www.novastar.tech PAGE

64 Groups of Serial Data



JH1						JH2					
Ground	GND	1	2	GND	Ground	Ground	GND	1	2	GND	Ground
/	Data43	3	4	Data42	/		Port1_T0+	3	4	Port2_T0+	Gigabit
/	Data45	5	6	Data44	/		Port1_T0-	5	6	Port2_T0-	
/	Data47	7	8	Data46	/	Oleve bit	Port1_T1+	7	8	Port2_T1+	
/	Data49	9	10	Data48	/	Gigabit Ethernet	Port1_T1-	9	10	Port2_T1-	
/	Data51	11	12	Data50	/	port	Port1_T2+	11	12	Port2_T2+	Ethernet port
/	Data53	13	14	Data52	/	port	Port1_T2-	13	14	Port2_T2-	port
/	Data55	15	16	Data54	/		Port1_T3+	15	16	Port2_T3+	
/	Data57	17	18	Data56	/		Port1_T3-	17	18	Port2_T3-	
/	Data59	19	20	Data58		Ground	GND	19	20	GND	Ground
Ground	GND	21	22	GND	Ground	Test button	TEST_INP UT_KEY	21	22	STA_LED-	Running indicator
/	Data61	23	24	Data60	/	Ground	GND	23	24	GND	Ground
/	Data63	25	26	Data62	/		А	25	26	DCLK1	Shift clock
/	NC	27	28	NC	/	Line	В	27	28	NC	/
/	NC	29	30	NC	/	decoding	С	29	30	LAT	Latch signal
/	NC	31	32	NC	/	signal /	D	31	32	NC	/
/	NC	33	34	NC	/		E	33	34	OE	Display enable
1	NC	35	36	NC	/	Ground	GND	35	36	GND	Ground
/	NC	37	38	NC	/	/	Data1	37	38	Data0	/
/	NC	39	40	NC	/	/	Data3	39	40	Data2	/
Ground	GND	41	42	GND	Ground	/	Data5	41	42	Data4	/
/	NC	43	44	NC	/	/	Data7	43	44	Data6	/
/	NC	45	46	NC	/	/	Data9	45	46	Data8	/
/	NC	47	48	NC	/	/	Data11	47	48	Data10	/
/	NC	49	50	NC	/	Ground	GND	49	50	GND	Ground
/	NC	51	52	NC	/	/	Data13	51	52	Data12	/
/	NC	53	54	NC	/	/	Data15	53	54	Data14	/
/	NC	55	56	NC	/	/	Data17	55	56	Data16	/
/	NC	57	58	NC	/	/	Data19	57	58	Data18	/
/	NC	59	60	NC	/	/	Data21	59	60	Data20	/
Ground	GND	61	62	GND	Ground	/	Data23	61	62	Data22	/
	RFU4	63	64	RFU3		Ground	GND	63	64	GND	Ground
	RFU6	65	66	RFU5	_	/	Data25	65	66	Data24	/
Reserved	RFU8	67	68	RFU7	Reserved	/	Data27	67	68	Data26	/
	RFU10	69	70	RFU9	/		Data29	69	70	Data28	/
	RFU12	71	72	RFU11		/	Data31	71	72	Data30	/

JH1							Jŀ	12			
	RFU14	73	74	RFU13		/	Data33	73	74	Data32	/
	RFU16	75	76	RFU15		/	Data35	75	76	Data34	/
	RFU18	77	78	RFU17		Ground	GND	77	78	GND	Ground
/	NC	79	80	NC	/	/	Data37	79	80	Data36	/
5V	EXT_5V	81	82	EXT_5V	5V	/	Data39	81	82	Data38	/
5 V	EXT_5V	83	84	EXT_5V	3 V	/	Data41	83	84	Data40	/

Reference Design for Extended Functions

	Description of Pins for Extended Functions									
Pin	Recommended Module Flash Pin	Recommended Smart Module Pin	Description							
RFU4	HUB_SPI_CLK	(Reserved)	Clock signal of serial pin							
RFU6	HUB_SPI_CS	(Reserved)	CS signal of serial pin							
RFU8	HUB_SPI_MOSI	/	Module Flash data storage input							
Kruo	/	HUB_UART_TX	Smart module TX signal							
RFU10	HUB_SPI_MISO	/	Module Flash data storage output							
KFUIU	/	HUB_UART_RX	Smart module RX signal							
RFU3	HUB_(CODE0								
RFU5	HUB_(CODE1	Madula Flack BUC central nin							
RFU7	HUB_(CODE2	Module Flash BUS control pin							
RFU9	HUB_(CODE3								
RFU14	POWER	R_STA1	Dual payor supply datastics simpl							
RFU16	POWER	R_STA2	Dual power supply detection signal							
RFU15	MS_I	DATA	Dual card backup connection signal							
RFU17	MS	_ID	Dual card backup identifier signal							



The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

Specifications

Maximum Resolution	512×384@60Hz				
Electrical Specifications	Input voltage	DC 3.8 V to 5.5 V			
10	Rated current	0.6 A			
16	Rated power consumption	3.0 W			
Operating Environment	Temperature	−20°C to +70°C			
1/ K	Humidity	10% RH to 90% RH, non-condensing			
Storage Environment	Temperature	-25°C to +125°C			
	Humidity	0% RH to 95% RH, non-condensing			
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 9.0 mm			
	Net weight	16.5 g Note: It is the weight of a single receiving card only.			
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 80 receiving cards.			
	Packing box dimensions	378.0 mm × 190.0 mm × 120.0 mm			

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

www.novastar.tech

Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website
www.novastar.tech
Technical support
support@novastar.tech