


# **MRV328**

# **Receiving Card**

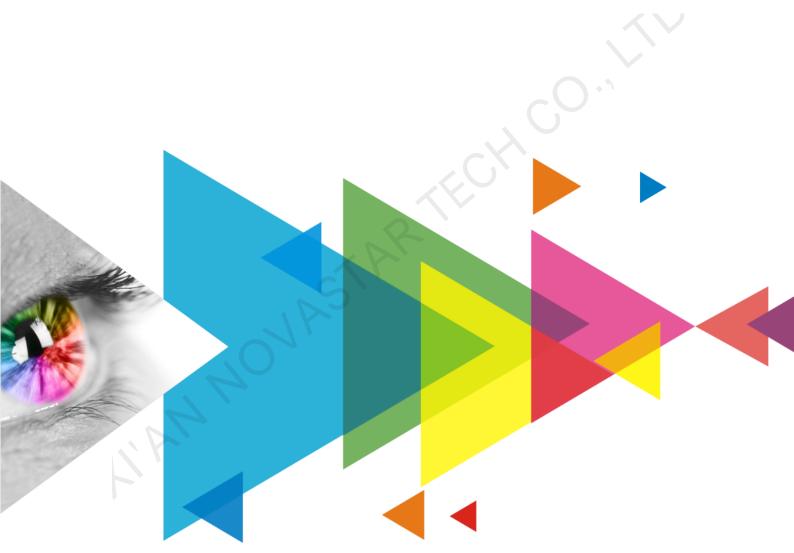

**Specifications** 

## **Change History**

Document Version	Release Date	Description
V1.2.6	2022-08-31	<ul> <li>Added the table of appearance description.</li> <li>Updated the input voltage.</li> <li>Updated the packing information.</li> </ul>
V1.2.5	2022-03-26	<ul> <li>Added the dimensions diagram description.</li> <li>Updated the certifications description.</li> <li>Updated the pins section.</li> </ul>
V1.2.4	2021-08-25	<ul> <li>Updated the description of features.</li> <li>Updated the appearance diagram.</li> <li>Added the certification related description.</li> </ul>
V1.2.3	2021-02-06	<ul><li>Updated the product introduction.</li><li>Updated the certification information.</li></ul>
V1.2.2	2020-09-11	<ul> <li>Optimized the product introduction.</li> <li>Optimized the feature description.</li> <li>Optimized the legends in the appearance diagram.</li> <li>Optimized the indicator description.</li> <li>Optimized the dimensions diagram.</li> <li>Added the pin description.</li> </ul>

### Introduction

The MRV328 is a general receiving card that supports up to 1/32 scan. A single MRV328 supports resolutions up to 256×256@60Hz. Supporting various functions such as pixel level brightness and chroma calibration, quick adjustment of dark or bright lines, and 3D, the MRV328 can significantly improve the display effect and user experience.

The MRV328 uses 8 standard HUB75E connectors for communication, resulting in high stability. It supports up to 16 groups of parallel RGB data. Thanks to its EMC compliant hardware design, the MRV328 has improved electromagnetic compatibility and is suitable for various on-site setups.

## Certifications

RoHS, EMC Class A

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

#### **Features**

#### **Improvements to Display Effect**

- Pixel level brightness and chroma calibration
  Work with NovaStar's high-precision calibration
  system to calibrate the brightness and chroma of
  each pixel, effectively removing brightness
  differences and chroma differences, and
- enabling high brightness consistency and chroma consistency.
- Quick adjustment of dark or bright lines
   The dark or bright lines caused by splicing of
   modules or cabinets can be adjusted to improve
   the visual experience. The adjustment is easy
   and takes effect immediately.

3D function
 Working with the sending card that supports 3D function, the receiving card supports 3D output.

#### **Improvements to Maintainability**

- Quick uploading of calibration coefficients
   Upload the calibration coefficients quickly to the receiving cards to improve efficiency.
- Setting of a pre-stored image in receiving card
  The image displayed during startup, or displayed
  when the Ethernet cable is disconnected or
  there is no video signal can be customized.
- Temperature and voltage monitoring
   The receiving card temperature and voltage can be monitored without using peripherals.
- Cabinet LCD
   The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error detection
   The Ethernet port communication quality of the receiving card can be monitored and the number

- of erroneous packets can be recorded to help troubleshoot network communication problems.
- NovaLCT V5.2.0 or later is required.
- Firmware program readback
   The receiving card firmware program can be read back and saved to the local computer.


   NovaLCT V5.2.0 or later is required.
- Configuration parameter readback
   The receiving card configuration parameters can be read back and saved to the local computer.


#### **Improvements to Reliability**

**Bottom** 

- Loop backup
   The receiving card and sending card form a loop via the primary and backup line connections.
   When a fault occurs at a location of the lines, the screen can still display the image normally.
- Dual program backup
   Two copies of firmware program are stored in
   the application area of the receiving card at the
   factory to avoid the problem that the receiving
   card may get stuck abnormally during program
   update.

## **Appearance**

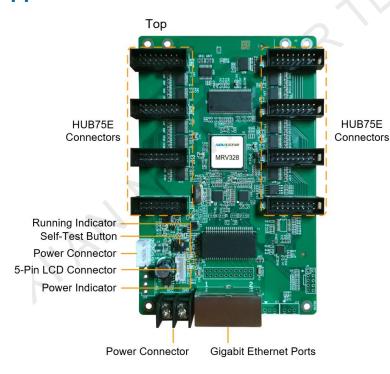

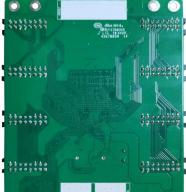

All product pictures shown in this document are for illustration purpose only. Actual product may vary.

Name	Description	
HUB75E Connectors	Connect to the module.	
Power Connector	Connect to the input power. Either of the connectors can be chosen.	
Gigabit Ethernet Ports	Connect to the sending card, and cascade other receiving cards. Each connector can be used as input or output.	


Name	Description	
Self-Test Button	Set the test pattern.	
	After the Ethernet cable is disconnected, press the button twice, and the test pattern will be displayed on the screen. Press the button again to switch the pattern.	
5-Pin LCD Connector	Connect to the LCD.	

## **Indicators**

Indicator	Color	Status	Description		
Running indicator	Green	Flashing once every 0.5s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.		
		Flashing once every 3s	Ethernet cable connection is abnormal.		
		Flashing 3 times every 1s	Ethernet cable connection is normal, but no video source input is available.		
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.		
Power indicator	Red	Always on	The power supply is normal.		

### **Dimensions**

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 19.0 mm. Ground connection (GND) is enabled for mounting holes.

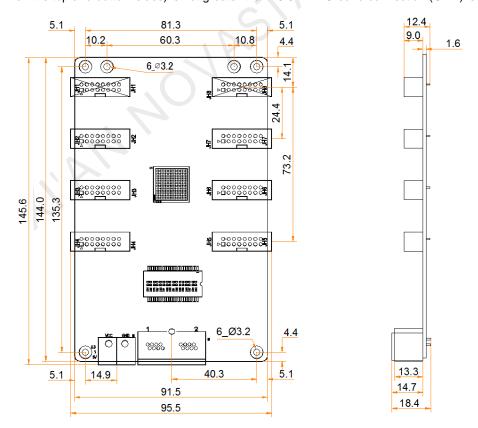

Tolerance: ±0.3 Unit: mm

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

www.novastar.tech PAGE 3

## **Pins**



Pin Definitions (Take JH1 as an example)					
/	R1	1	2	G1	/
/	B1	3	4	GND	Ground
/	R2	5	6	G2	/
/	B2	7	8	HE1	Line decoding signal
Line decoding signal	HA1	9	10	HB1	Line decoding signal
Line decoding signal	HC1	11	12	HD1	Line decoding signal
Shift clock	HDCLK1	13	14	HLAT1	Latch signal
Display enable signal	HOE1	15	16	GND	Ground

## **Specifications**

Maximum Resolution	256×256@60Hz		
Electrical Specifications	Input voltage	DC 3.8 V to 5.5 V	
	Rated current	0.5 A	
	Rated power consumption	2.5 W	
Operating Environment	Temperature	-20°C to +70°C	
	Humidity	10% RH to 90% RH, non-condensing	
Storage Environment	Temperature	-25°C to +125°C	
4	Humidity	0% RH to 95% RH, non-condensing	
Physical Specifications	Dimensions	145.6 mm × 95.5 mm × 18.4 mm	
10	Net weight	85.5 g	
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 100 receiving cards.	
	Packing box dimensions	625.0 mm × 180.0 mm × 470.0 mm	

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

#### Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### **Trademark**

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech Technical support support@novastar.tech